

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE


WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

CATALYST V1 RIGGING DIAGRAM

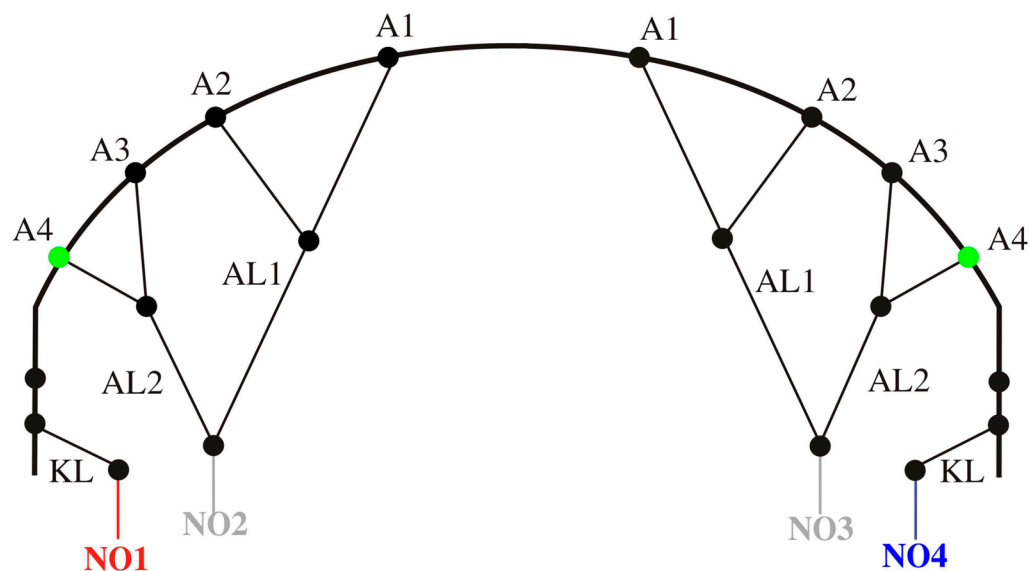

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	4m	6m	8m	10m	12m	14m
A1	880	1080	1240	1360	1500	1580
A2	510	600	660	720	785	840
A3	530	660	770	820	900	960
A4	320	420	480	440	520	510
AL1	870	1230	1200	1360	1500	1580
AL2	650	880	750	820	900	960
KL	570	790	640	620	720	670