

CHECKING BRIDLES AND SPEED SYSTEM FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES AND SPEED SYSTEM TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS ON THE NEXT PAGE TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS



- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles as in the image.
- Print out the sheet and write down any differences.

If your bridles are out by more than 15mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

SPEED SYSTEM ZERO POSITION

You can check your Speed System lines by levelling the front and back line pigtails, then tension the three top ends of the Speed System where the bridle lines are attached, they should be at the same level \pm or - 15mm. See picture below.


If the difference between the three ends is bigger than 15mm you should replace your Speed System.

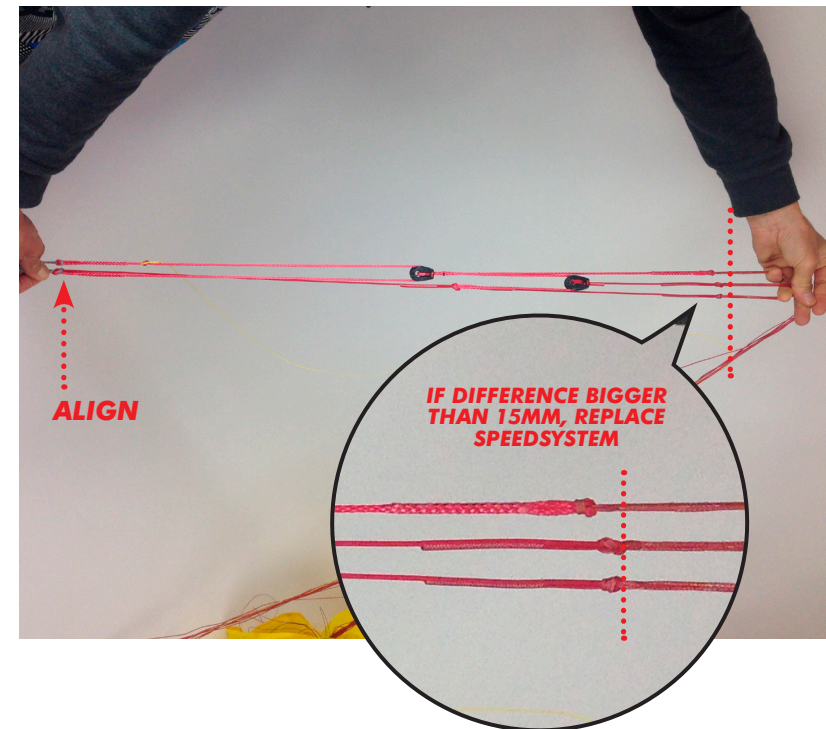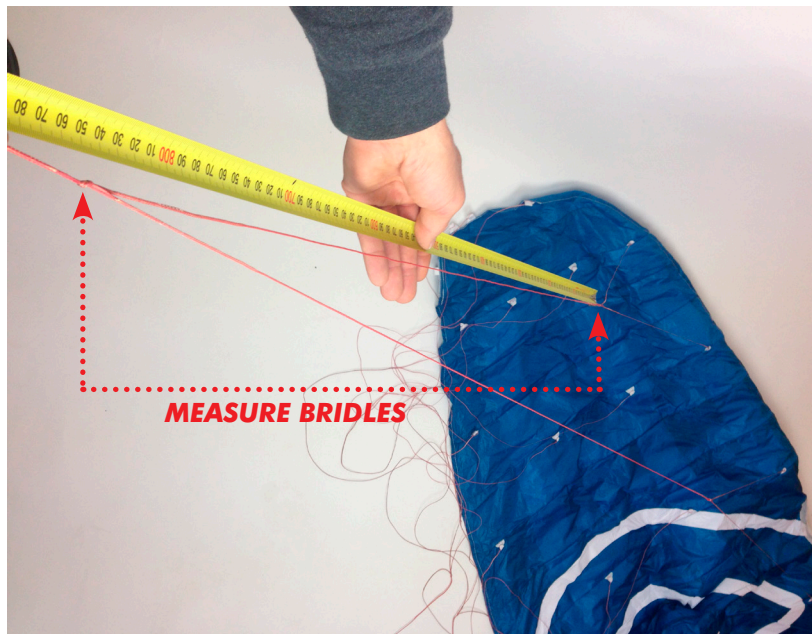


BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	5m	7m	9m	11m	14m
A1	1199	1471	1676	1849	2053
A2	1099	1351	1541	1699	1887
A3	950	1175	1341	1478	1643
A4	790	982	1122	1237	1375
A5	607	762	873	961	1070
A6	462	585	672	740	825
AM1	1210	1450	1640	1810	2000
AM2	1210	1450	1640	1810	2000
AM3	1210	1450	1640	1810	2000
AR1	220	230	260	300	335
B1	1166	1431	1631	1799	1997
B2	1065	1311	1496	1649	1832
B3	922	1141	1302	1436	1595
B4	765	952	1089	1200	1334
B5	589	742	850	936	1042
B6	449	571	656	722	805
B7	1537	1874	2129	2348	2601
BM1	1210	1450	1640	1810	2000
BM2	1210	1450	1640	1810	2000
BM3	1210	1450	1640	1810	2000
BR1	280	280	310	350	385
C1	1258	1540	1755	1936	2149
C2	1151	1413	1611	1777	1973
C3	1003	1237	1412	1557	1729
C4	836	1038	1185	1306	1452
C5	651	816	934	1029	1145
C6	488	619	711	782	872
C7	1564	1908	2168	2390	2648
CM1	1210	1450	1640	1810	2000
CM2	1210	1450	1640	1810	2000
CM3	1210	1450	1640	1810	2000
CR1	280	280	310	350	385
K1	891	1052	1206	1344	1490
K2	665	781	899	1003	1112
K3	794	933	1070	1188	1316
K4	623	729	839	932	1033
K5	491	573	661	735	815
K6	370	429	497	553	613
K7	321	368	425	470	519
KML1	800	960	1080	1190	1317
KML2	480	580	650	720	797
KML3	480	580	650	720	797
KR1	1950	2190	2350	2520	2715
ISL	1850	2200	2490	3400	3800
LSL	3360	3750	3950	3730	4120

FRENZY V10 RIGGING DIAGRAM

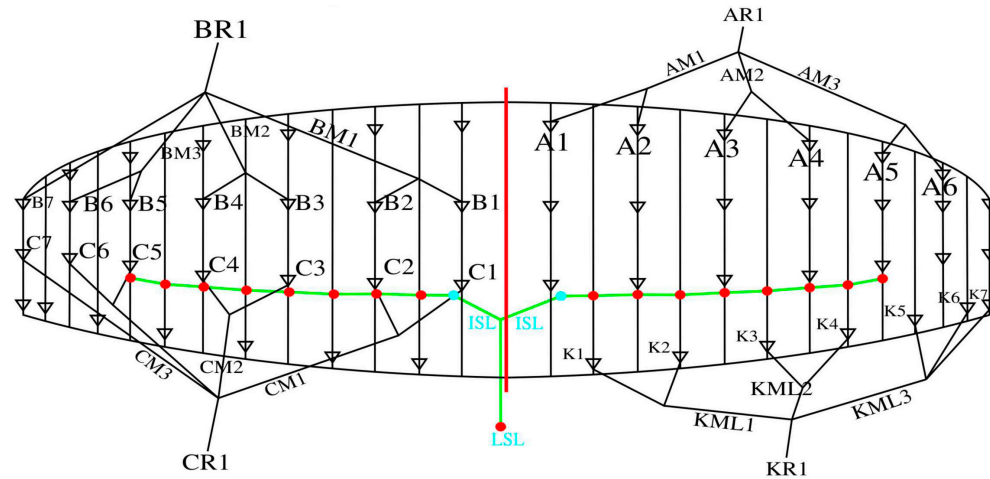

SPEED SYSTEM

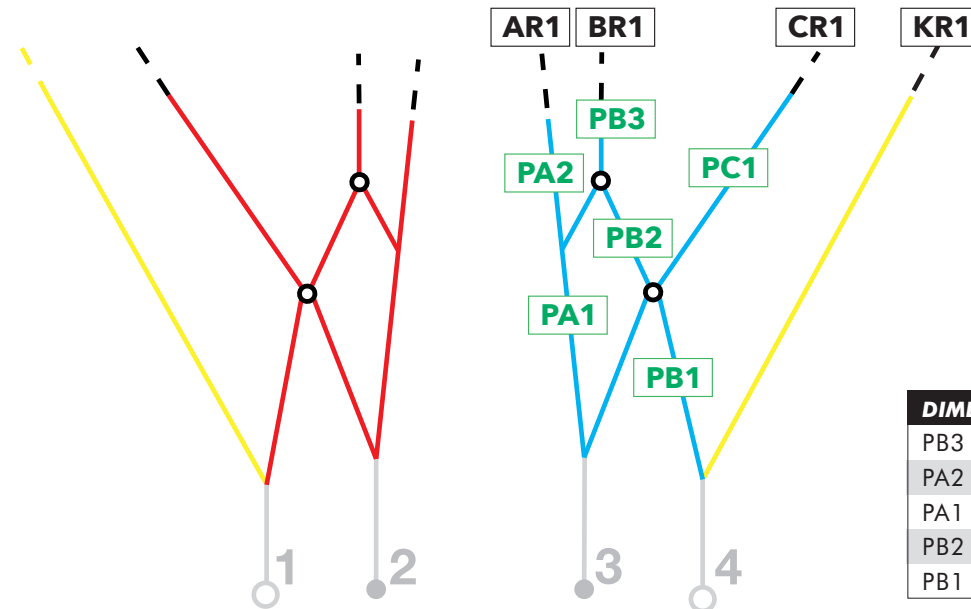

DIMENSIONS:	
PB3	245
PA2	373
PA1	530
PB2 & PC1	405
PB1	960