

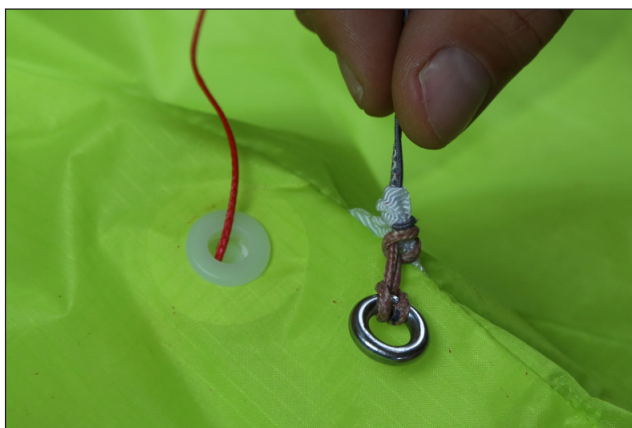
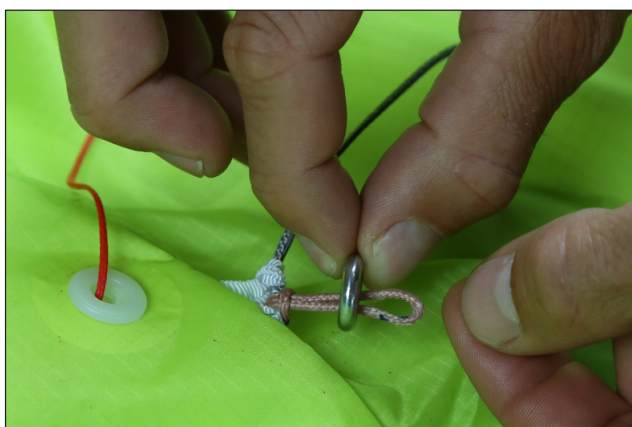


RETROFIT STAINLESS STEEL RINGS TO THE RE-RIDE RELEASE SYSTEM ON ACCESS V6, FRENZY V10, SUMMIT V3



1: Unfold your kite so you have access to the center cells where the Internal Re-Ride Lines run out of the bottom surface through the white plastic eyelets.

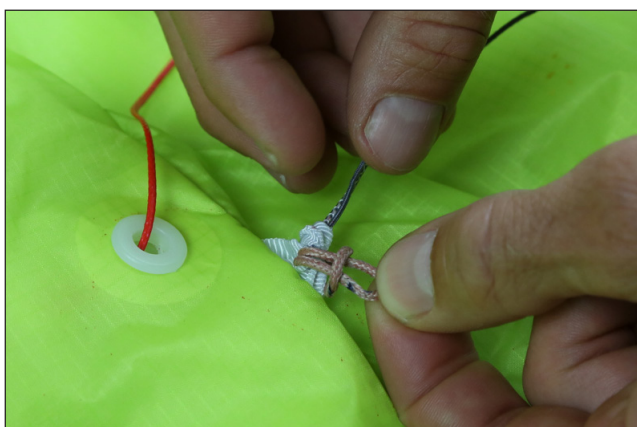



2: Loop in the Stainless steel ring to the bridle line tab next to the white plastic eyelet. Repeat on the other side.

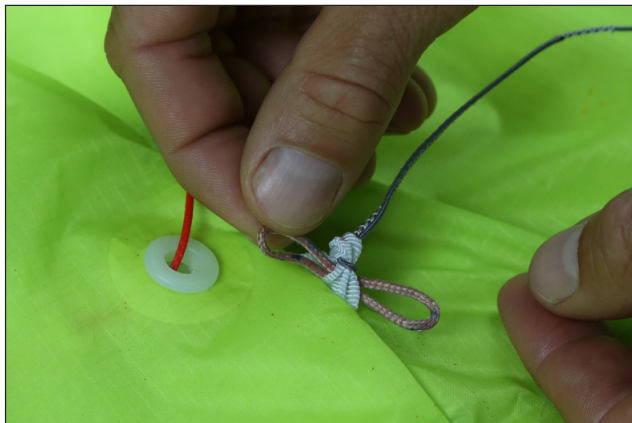



3: Disconnect the 5th flying line from the pigtail.

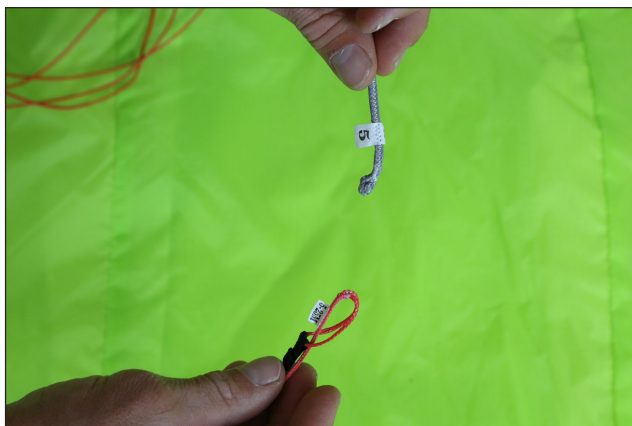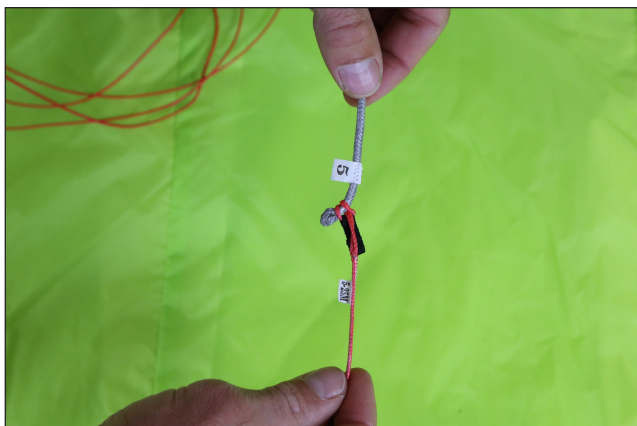

4: Undo the riser line that connects the left and right Internal Re-ride Lines.

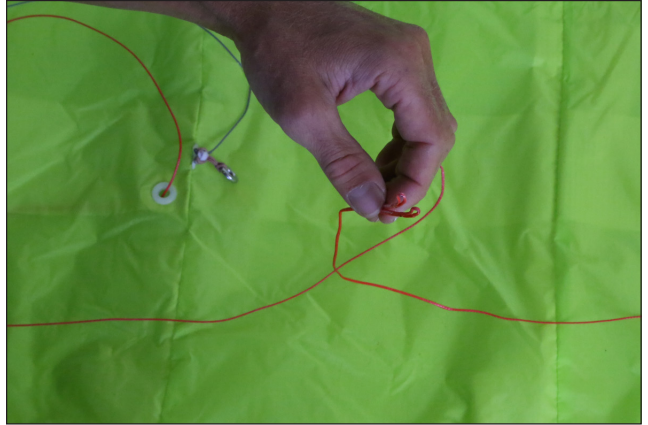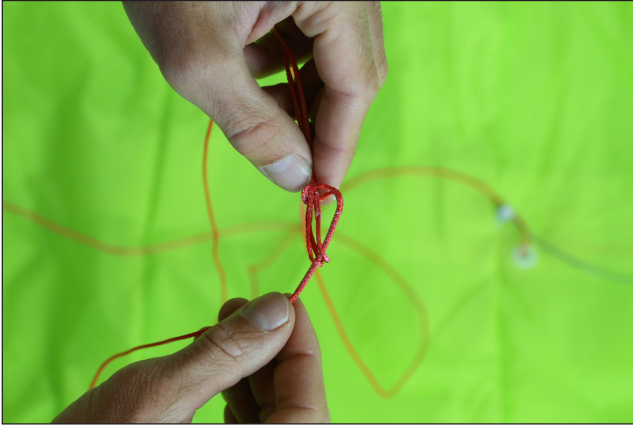

5: Guide the Internal Re-Ride Line through the Stainless steel ring. Repeat on the other side.

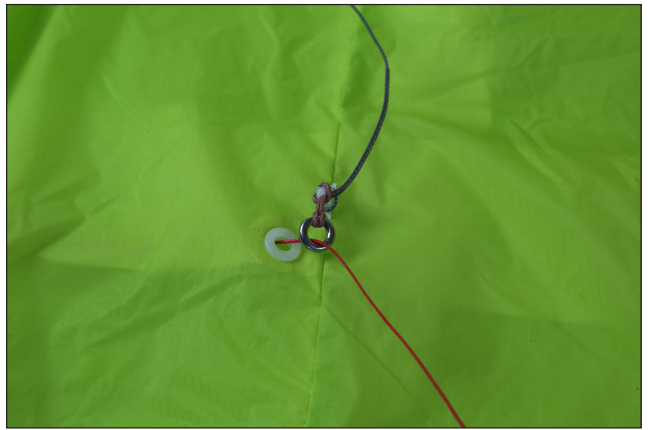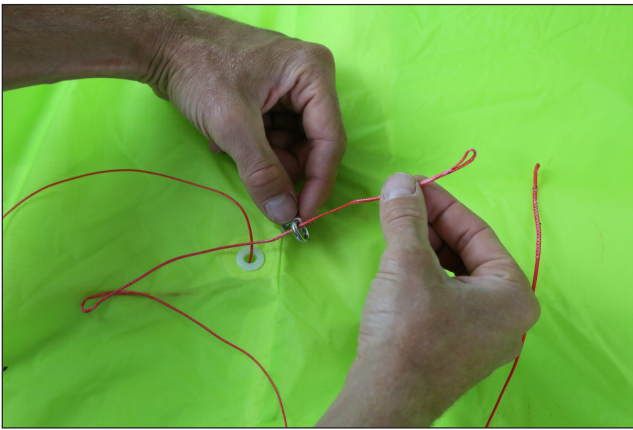

6. Connect the Internal Re-Ride Line back together with the riser line, and connect your 5th line back onto the pigtail and you are ready to go again!

