


EDGE VT RIGGING DIAGRAM

BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.

1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note or label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

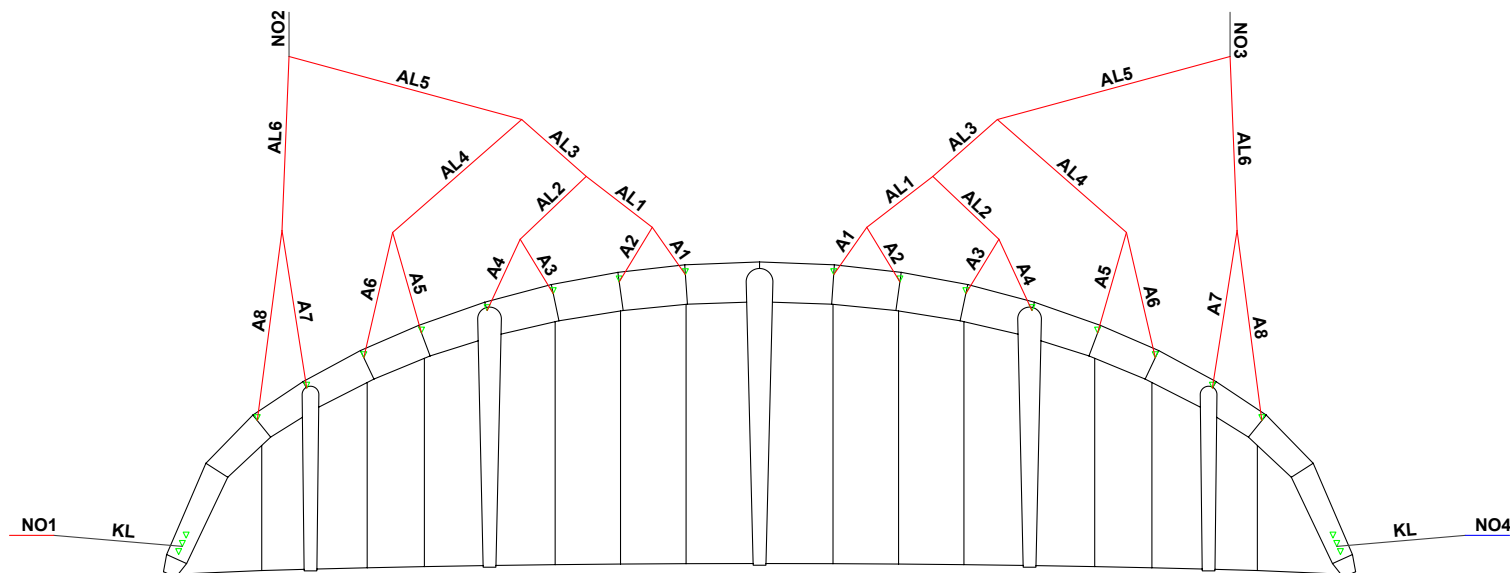

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	6m	7m	8m	9m	10m	11m	12m	13m	15m	18m
A1	510	550	590	615	650	640	660	690	750	830
A2	300	330	350	370	390	370	380	400	430	480
A3	390	420	450	475	500	530	550	570	620	680
A4	230	250	270	280	300	310	330	340	365	410
A5	410	440	470	490	520	550	570	590	640	700
A6	260	280	300	320	340	360	370	390	415	470
A7	450	490	520	550	580	610	630	660	710	780
A8	330	360	380	400	420	440	460	480	520	570
AL1	610	660	700	735	770	870	900	940	1000	1110
AL2	270	290	310	330	350	370	380	400	430	470
AL3	530	570	609	640	680	710	740	770	820	910
AL4	360	390	420	435	460	480	500	520	560	620
AL5	850	920	980	1035	1090	1150	1190	1240	1330	1470
AL6	760	820	880	925	980	1040	1070	1120	1200	1330
KL	560	590	630	660	710	735	775	800	855	950