

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE


WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

ALPHA V1 RIGGING DIAGRAM

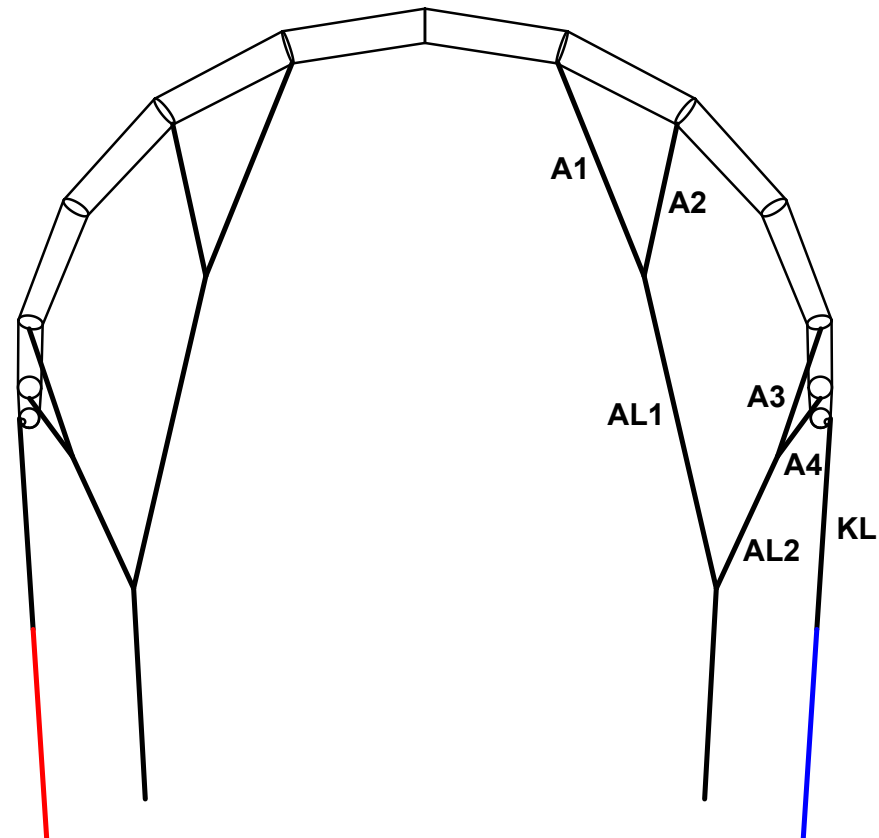

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

LINE NO.	4M	6M	8M	10M	12M
A1	709	868	1000	1091	1201
A2	478	586	675	734	810
A3	415	499	585	636	701
A4	310	385	435	477	524
AL1	980	1203	1390	1516	1666
AL2	482	588	680	741	813
KL	575	650	750	790	910
KL	575	650	750	790	910