

ALPHA V1 4/6/8/10/12M RIGGING DIAGRAM


CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.


RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

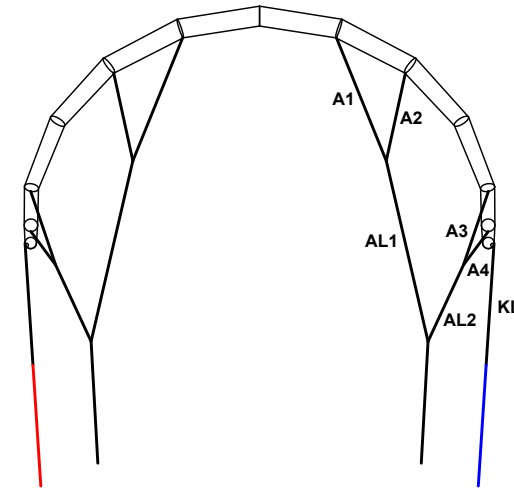

ALPHA V1 14/16M RIGGING DIAGRAM

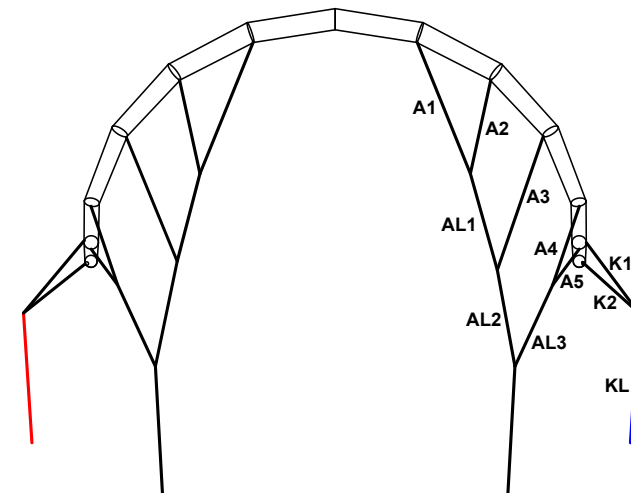

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

LINE NO.	4M	6M	8M	10M	12M	14M	16M
A1	709	868	1000	1091	1201	1330	1415
A2	478	586	675	734	810	880	935
A3	415	499	585	636	701	1300	1385
A4	310	385	435	477	524	760	810
A5	-	-	-	-	-	570	610
AL1	980	1203	1390	1516	1666	950	1010
AL2	482	588	680	741	813	910	970
AL3	-	-	-	-	-	880	940
K1	-	-	-	-	-	520	555
K2	-	-	-	-	-	500	530
KL	575	650	750	790	910	530	565