

CATALYST V2 RIGGING DIAGRAM


CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

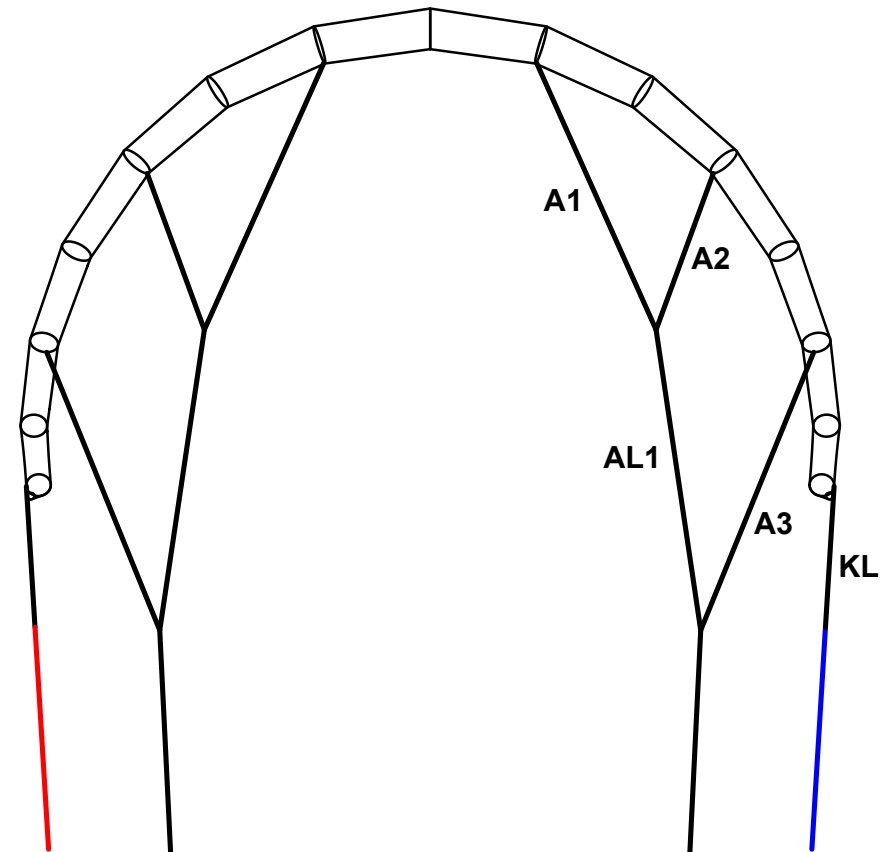

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

LINE NO.	5M	6.5M	8M	9.5M	11M	13.5M
A1	970	1100	1230	1340	1430	1560
A2	540	615	690	750	800	880
A3	990	1130	1260	1370	1470	1600
AL1	1000	1130	1270	1380	1470	1610
KL	515	565	645	660	730	810