

## CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

### RECOMMENDATIONS


- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

### BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	4m	6m	7m	8m	9m	10m	12m	14m
A1	640	810	865	930	995	1040	1145	1250
A2	330	410	440	470	500	525	575	620
A3	440	540	580	620	655	690	760	820
A4	585	725	775	830	880	925	1015	1100
AL1	685	840	905	970	1030	1080	1185	1280
AL2	685	840	905	970	1030	1080	1185	1280
KL	400	480	520	560	590	620	680	730

### ENDURO V1 - 4M RIGGING DIAGRAM

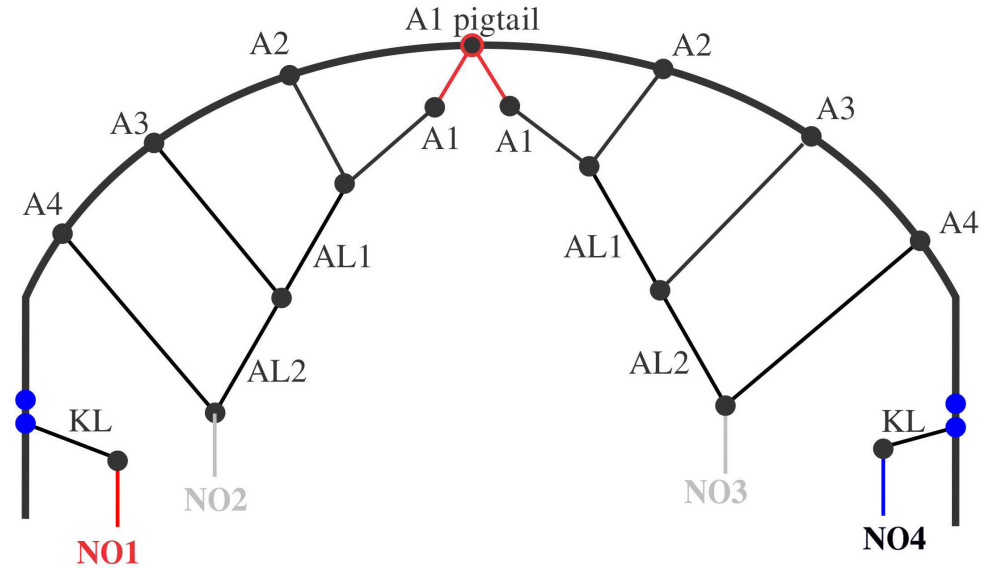

### ENDURO V1 - 6/7/8/9/10/12/14M RIGGING DIAGRAM

