

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

LINE NO.	1.5m
A5	420
A6	470
B6	480
C6	490
D6	527
A4	610
A3, AR3	690
BR1	700
A2	793
A1, AR2	890
AR1	1000
KR1	1395

