

### CHECKING BRIDLES FOR STRETCH OR SHRINKAGE


WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE.  
USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

#### RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

### IGNITION V3 RIGGING DIAGRAM

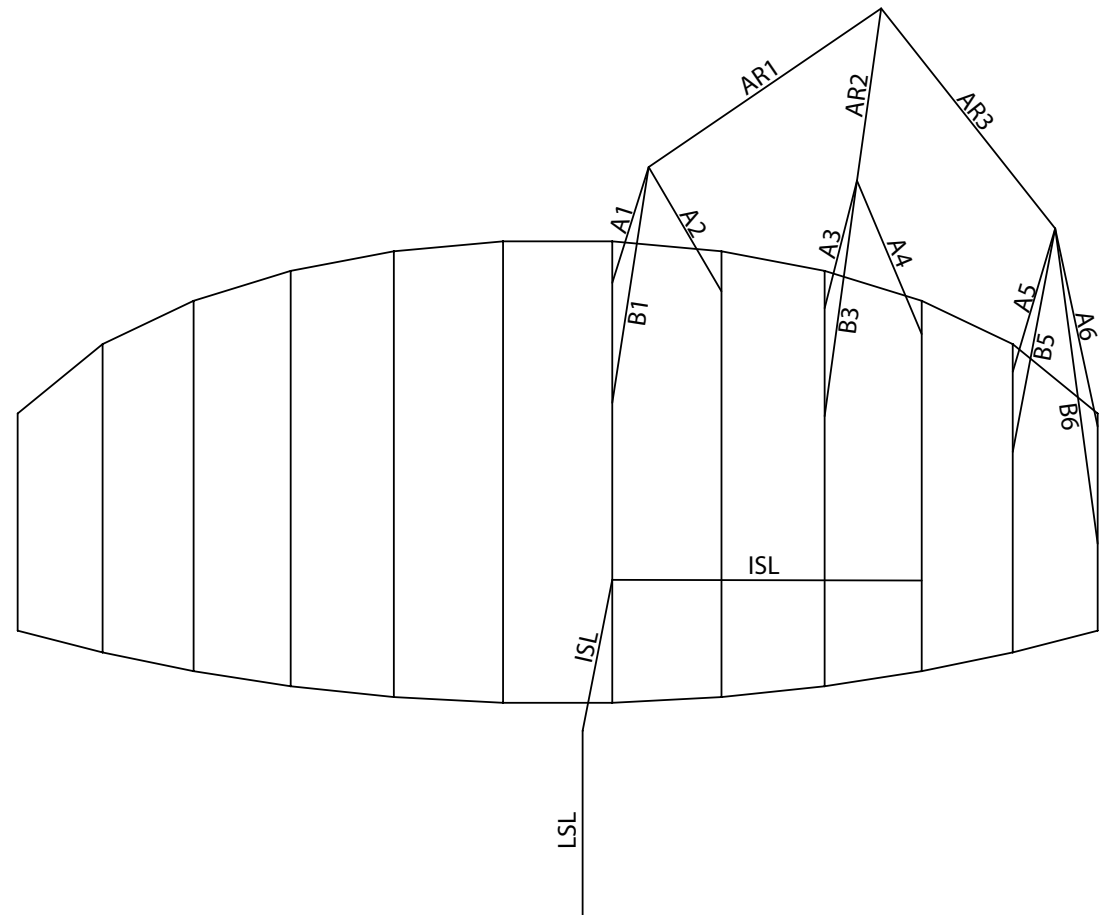

#### BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

LINE NO.	1.5M	2M	2.5M	3M
AR3	250	300	345	385
AR2	365	440	505	570
AR1	440	530	610	685
A6	382	470	544	620
A4	412	504	584	660
B6	438	538	622	707
A5	452	554	640	728
B5	463	567	655	745
A2	470	574	663	751
A3	480	586	678	766
B3	487	595	689	777
A1	531	648	748	846
B1	543	662	763	864
ISL	730	900	1035	1155
LSL	815	1000	1150	1285