


OZONE®

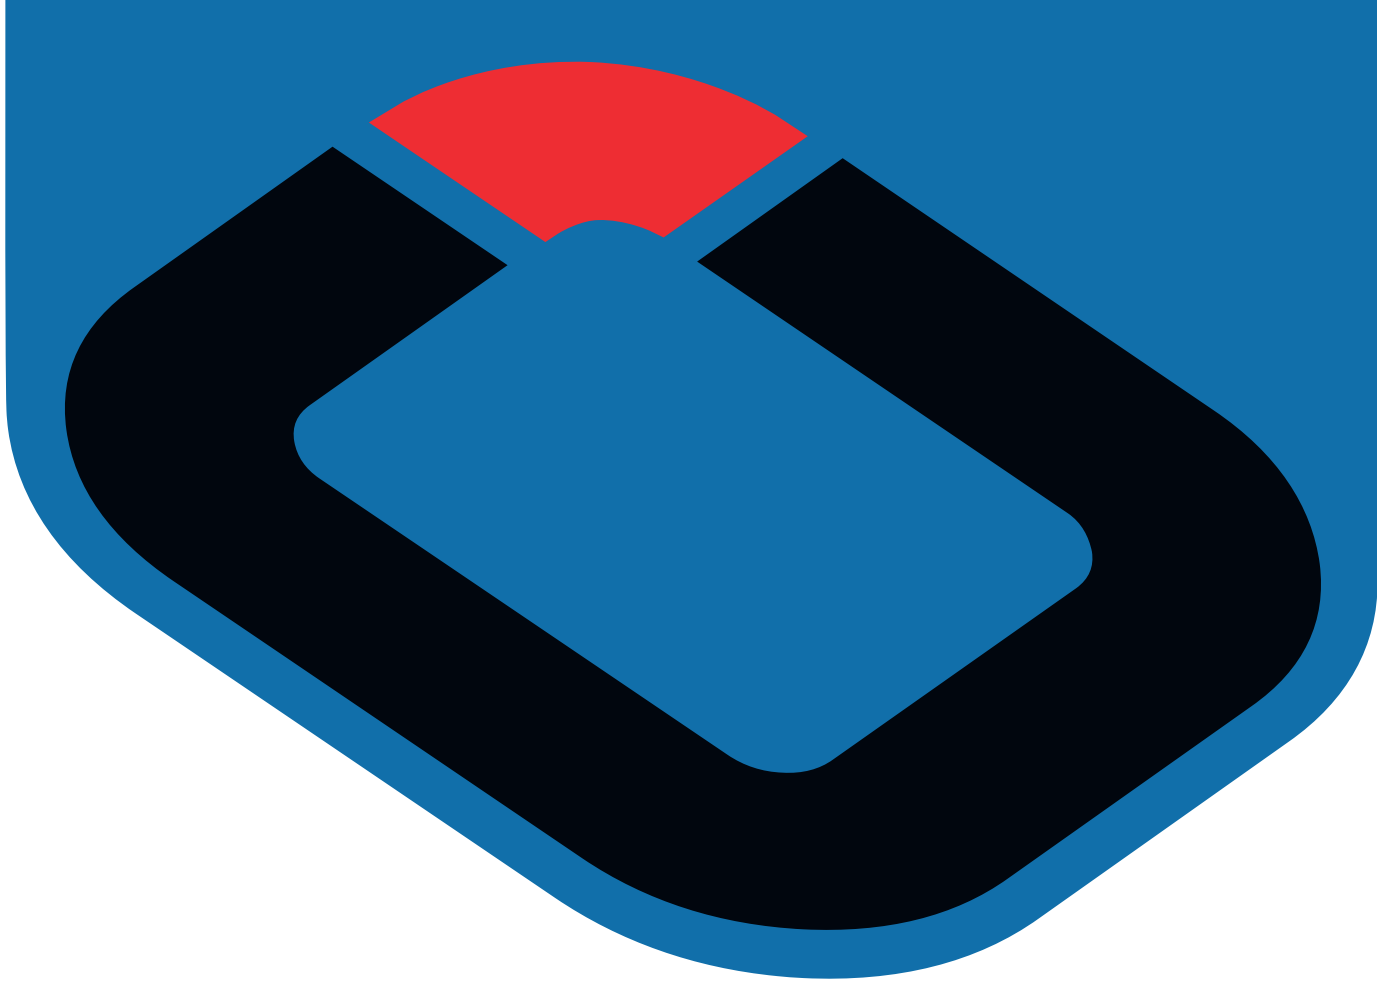

TRAINER FOIL KITE MANUAL

THANKS

Thank you for purchasing this Ozone product. Our mission is to build products with cutting edge performance that are easy, fun and safe to use, no matter what your level.

At Ozone we are passionate about kite and water sports, and it is this passion that drives our design team to perfect and develop products that we love to ride with. We are proud of the quality of our products, and are constantly searching for the best components and materials to use in our designs. We manufacture in our own high-quality production facility in Vietnam, which guarantees a build quality that we are proud to put the Ozone name on.

A close look at one of our products reveals that same superior quality and construction that ensures that every Ozone product will enjoy a long life, with consistent handling, performance and aesthetics. To view the factory video visit our website www.flyozone.com.

Kite and water sports like all dynamic action sports carry inherent risks but with common sense and education from qualified instructors means you can easily enjoy these incredible sports. Accidents generally happen due to a lack of experience, launching from dangerous spots, changing weather conditions or from using a kite or wing that is too big for the rider's ability or wind speed. Please take the time to learn safely and you will progress far quicker with qualified instruction.

Ride safe
Team Ozone

FRA : POUR TÉLÉCHARGER CE MANUEL DANS VOTRE LANGUE, ALLEZ SUR LE PAGE DU PRODUIT ET CHOISISSEZ VOTRE KITE >> WWW.FLYOZONE.COM

ESP : PARA DESCARGAR ESTE MANUAL EN SU IDIOMA DIRÍJASE A LA PÁGINA DEL PRODUCTO DEL MODELO DE SU COMETA >> WWW.FLYOZONE.COM

ITA : PER SCARICARE QUESTO MANUALE NELLA VOSTRA LINGUA, ANDATE ALLA PAGINA PRODOTTI DEL KITE IN VOSTRO POSSESSO >> WWW.FLYOZONE.COM

DE : UM DIESE ANLEITUNG IN DEINER SPRACHE HERUNTER ZU LADEN, GEHE AUF DIE PRODUKTSEITE DES KITES, WELCHEN DU BESITZT >> WWW.FLYOZONE.COM

WARRANTY

Ozone warrants this product to be free from major defects in material or workmanship to the original purchaser, for a period of six months from the date of purchase. This warranty is subject to the following limitations;

- The warranty is valid only when the product is used for its intended use and does not cover products used in rental or teaching operations.
- Ozone will make the final warranty determination, which may require inspection and/or photos of the equipment, which clearly show the defect(s). If necessary, this information must be sent to the Ozone dealer, postage prepaid.
- If a product is deemed to be defective by Ozone, the warranty covers the repair or replacement of the defective product only.
- Ozone will not be responsible for any costs, losses, or damages incurred as a result of loss of use of this product. The warranty does not cover damage caused by misuse, abuse, neglect or normal wear and tear including but not limited to; rigging with other than Ozone components, damage due to

excessive sun exposure, damage caused by improper handling or storage, damage caused by use in waves or shore break, damage caused by self launching or self landing and damage caused by anything other than defects in material and workmanship.

- This warranty is voided if any unauthorized repair, change or modification has been made to any part of the equipment. The warranty for any repaired or replaced equipment is good from the date of the original purchase only. The original purchase receipt must accompany all warranty claims.
- The name of the retailer and date of purchase must be clear and legible.
- There are no warranties that extend beyond the warranty specified herein.

WARRANTY CLAIMS

- Warranty claims can only be handled once the product has been activated through our website. Go to www.flyozone.com to register your product)
- Warranty claims must be processed and be issued a return authorization prior to shipping to the Ozone dealer the product was purchased from.

RELEASE OF LIABILITY

OZONE KITES LTD RELEASE OF LIABILITY RELEASE OF LIABILITY, CLAIM WAIVER, ASSUMPTION OF RISK

By assembling and/or using this Ozone product, you agree that you have read and understood the entire Ozone product owners manual, including all instructions and warnings contained in that manual, prior to using the Ozone product in any way. You additionally agree that you will ensure any additional or subsequent user of your Ozone product will read and understand the entire Ozone product owners manual, including all instructions and warnings contained in that Manual, prior to allowing that person to use your Ozone product.

ASSUMPTION OF RISK

Use of the Ozone product and any of its components involve certain risks, dangers, and hazards which can result in serious personal injury and death to both the user and to non-user third parties. In using this Ozone product, you freely agree to assume and accept any and all known and unknown risks of injury to you and third parties while using this equipment. The risks inherent in this sport can be greatly reduced by abiding by the warning guidelines listed in this owner manual and by using common sense.

RELEASE AND WAIVER OF CLAIMS

In consideration of the sale of the Ozone product to you, you hereby agree to the fullest extent permitted by law, as follows;

TO WAIVE ANY AND ALL CLAIMS that you have or may in the future have against Ozone Kitesurf LTD and all related parties resulting from use of the Ozone product and any of its components.

TO RELEASE Ozone Kitesurf LTD and all related parties from any and all liability for any loss, damage, injury or expense that you or any users of your Ozone product may suffer, or that your next of kin may suffer, as a result of the use of the Ozone product, due to any cause whatsoever, including negligence or breach of contract on the part of Ozone Kitesurf LTD and all related parties in the design or manufacture of the Ozone product and any of its components.

In the event of your death or incapacity, all provisions contained herein shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives. Ozone Kitesurf LTD related parties have not made and expressly deny any oral or written representations other than what is set forth herein the Ozone Product Users Manual.

WARNINGS



READ THE FOLLOWING POINTS BEFORE ASSEMBLING YOUR KITE: WARNING:

- Kite flying can be dangerous.
- Always use extreme caution when using this product.
- Misuse of this product can cause serious injury or death.
- Only use this product if you are in good physical health.
- Never act in a careless manner when using this product (such as jumping in the air, or tying yourself down).
- You are responsible for your own safety, and the safety of others around you when using this product.
- If you are under 18 you should have your parents or legal guardian read these warnings and instructions. You should not use this product unless you are under proper guidance and supervision.
- The use of this product exposes the user to many unavoidable and unexpected risks, dangers and hazards.
- Do not use this product if you are under the influence of alcohol, drugs or medications.
- This manual refers to the current product it comes with. No information contained herein applies to previous and/or other products. Always read and understand all warnings and instructions for any other product being used. To view previous product manuals go to www.flyozone.com

IMPORTANT RULES:

- Before using this product you must take lessons from a certified instructor/school. Do not attempt to fly a kite without being taught by a certified kite instructor.
- This product is not a personal flotation device. Always wear a Coast Guard approved personal flotation device when using this product near the water.
- Always carefully inspect all of your equipment before using it.
- Always have a partner when launching and landing your kite.
- Always learn using a small two line trainer kite before using a larger more complicated kite.
- Never allow anyone who is not familiar with traction kiting to use this product without experienced assistance.
- Never use this product without a kite leash system. A loose kite is extremely dangerous to everyone downwind.
- The kite/control system is equipped with passive release systems, which need to be activated by the user for them to work.

- The leash system is not a permanent attachment to this product. Never permanently attach yourself to the kite or any of its components.
- Never use this the kite with another control system or kite leash. Only use the control system that is supplied with this kite as other brands are not compatible with this design, therefore the release system will NOT work.
- Always wear a helmet when using this product.
- Always use a high quality and well maintained kite specific harness.
- Get yourself used to the way your quick release devices work by testing them often in a non emergency situation.
- Rinse your quick release device in fresh water after every session. Quick release devices have a limited lifetime and must be checked and replaced often.
- Always release and re-load all the release systems to familiarize yourself with how they work. This is the only way to be sure that you know how to use them in all situations, and that they are correctly loaded and safe for use.
- If you have a bar with a mechanical quick release trim loop it must be changed after 150 hours of kiting. Change any quick release or kite leash before if you see any sign of wear. The wearing of your quick release devices is not considered a warranty issue.

CHOOSE SAFE WEATHER CONDITIONS:

- Never learn to use this product in more than 10 knots of wind.
- We highly recommend you purchase a wind speed indicator to be able to measure wind speeds. Study the wind guide to understand wind speeds.
- Never use this product in high winds.
- Never use this product in thunderstorm and lightning conditions.
- Only use this product when you can remain in a standing position.
- Never use this product in wind conditions that are above your ability level.
- Never use this product near or on the water in offshore wind conditions.


WARNINGS

CHOOSE A SAFE LOCATION:

- Always observe local rules and regulations when using this product.
- Never use this product near power lines, telephone poles, trees, bushes, roads, automobiles or airports.
- Only use this product when you have at least 100m of clear space downwind, and on both sides of your launching position. The power of the kite can pull you downwind unexpectedly with great force.
- Do not fly your kite over other people or pets. Spectators should remain upwind of you when using this product.
- Never use this product on crowded beaches or fields.
- Never use this product near the water unless you know how to swim and are in good physical health.
- Practice launching and landing procedures, and self rescue techniques before using this product near the water.

USE CAUTION WITH FLYING LINES:

- Never touch the flying lines when the kite is in use. Flying lines are extremely dangerous while under tension and can cause serious injury or death.
- Never use this product with worn lines. A line that breaks while under tension can cause serious injury or death.
- Always check your flying lines for knots before each use. Knots greatly reduce the strength of the lines.
- Stay away from tangled flying lines unless the kite is secured to the ground. An unsecured kite can self launch unexpectedly, and can cause serious injury or death.
- Never allow yourself, or anyone else, to get between the control bar and the kite when using this product.

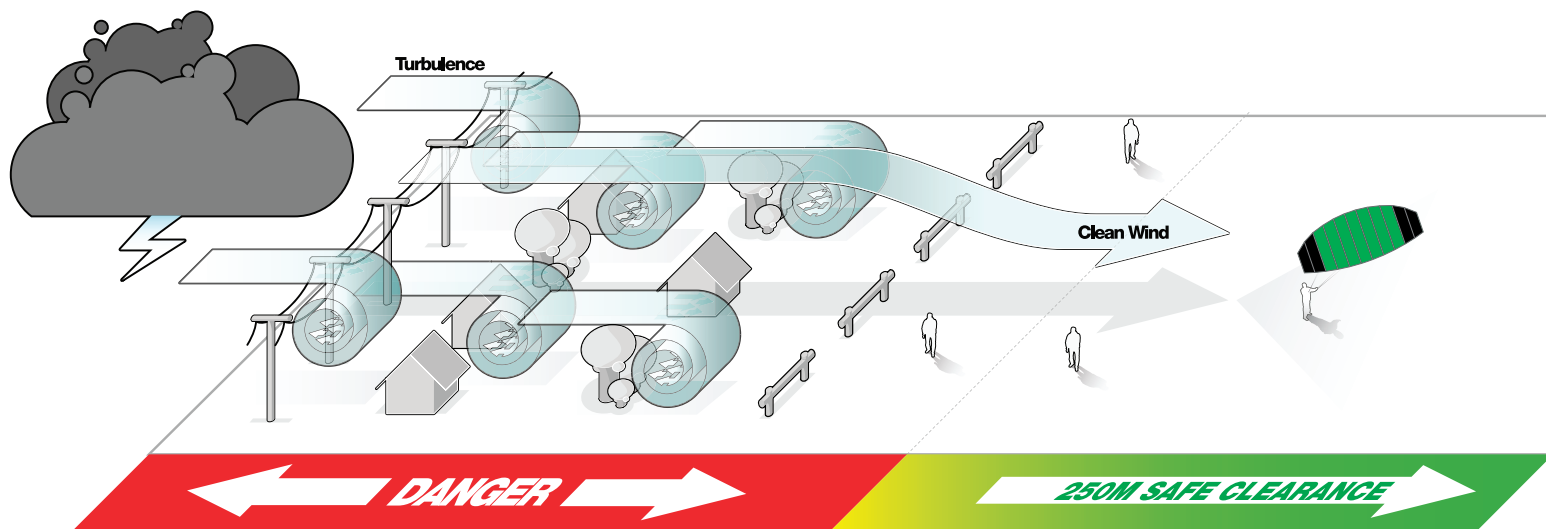


WIND


FORCE	KNOTS	MPH	METRES/SEC	KPH	DESCRIPTION
0	<1	<1	<0-0.2	<1	Calm: Smoke rises vertically. Go Paragliding!
1	1-3	1-3	0.3-1.5	1-5	Light air: Smoke drift shows wind direction. It's coming - get large size kites ready.
2	4-6	4-7	1.6-3.3	1-5	Light breeze: Wind felt on face, leaves rustle. Kite: cruising with buggy/mountain board/ski/snowboard. Experts hydro foiling.
3	7-10	8-12	3.4-5.4	12-19	Gentle wind: Leaves in motion, light flags extended. Kite: ripping on light wind gear/hydrofoil/mountain board/buggy/snow. Wing: Learning with SUP/windsurf board, skate/mountain board, ski/snow board. Experts riding with hydrofoil.
4	11-16	13-18	5.5-7.9	20-29	Moderate wind: Flags flap, small branches move. Now we're talking. Kite: twin tip jumping begins. Wing: Ripping on hydrofoil, skate/mountain board, ski/snow board. Cruising with SUP/windsurf board.
5	17-21	19-24	8.0-10.7	30-38	Fresh wind: Small trees begin to sway. Everyone loving life, powered up and smiling!
6	22-27	25-31	10.8-13.8	39-50	Strong wind: Large branches in motion. Competent riders with huge grins.
7	28-33	32-38	13.9-17.1	51-61	Near gale: Whole trees in motion. Competent riders ripping and jumping.
8	34-40	39-46	17.2-20.7	62-74	Gale: Trouble walking! Expert riders boosting into orbit!

WIND WINDOW

CENTRE OF WIND WINDOW = MAXIMUM POWER

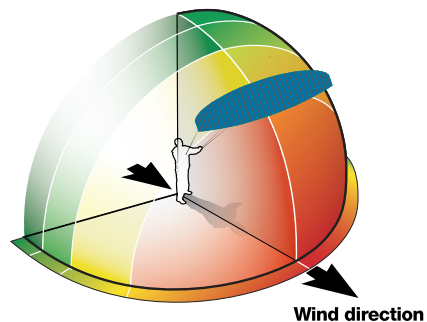


Minimum power

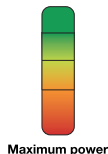


Maximum power

EDGE OF WIND WINDOW = MINIMUM POWER

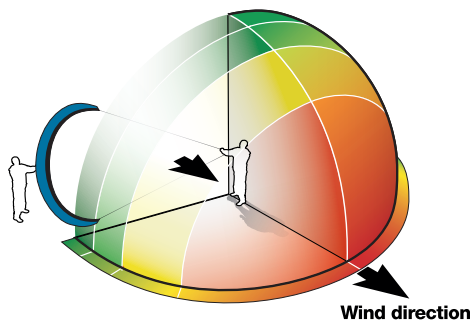


SET-UP

2-LINE TRAINER

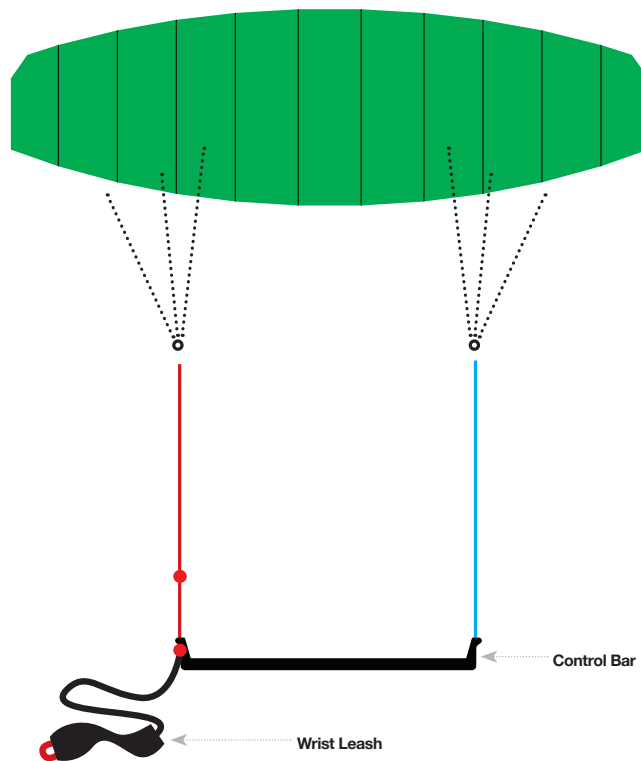

3-LINE TRAINER

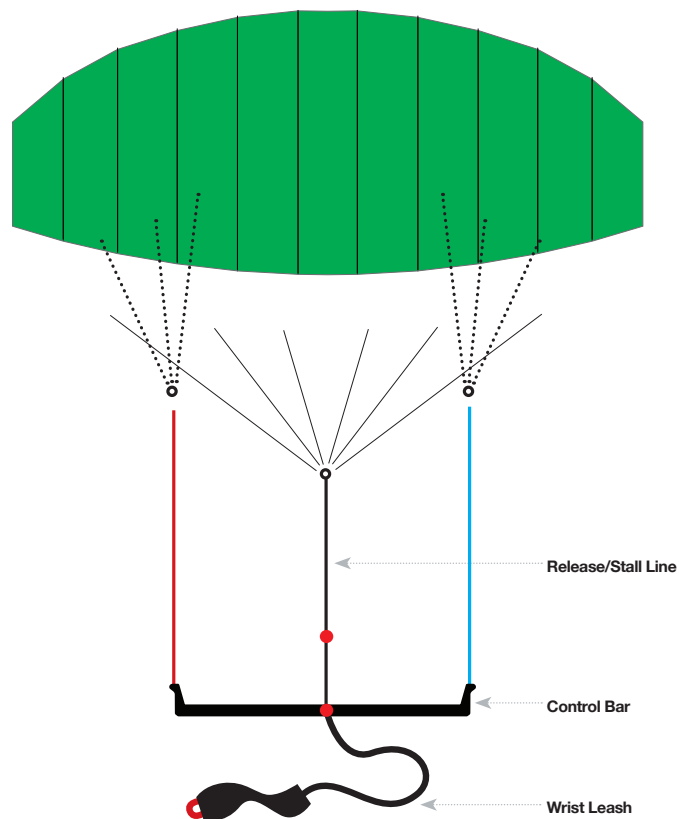

SECURITY

WARNING:

Children should only use kites under competent supervision and in light winds. Build up your skill level and confidence slowly and learn to fly the kite in the correct wind conditions and area. There should be no obstacles within 250m downwind of the kite. Never fly the kite in wind over 10mph for the first time, until you are skilled only fly the kite in winds less than 10mph. Set up your kite in wind less than 10mph to ensure your safety and the safety of others. See wind diagram and description page.

KITE SET-UP

Once you've chosen a safe place to fly, you will need to set up the different parts of your kite before using it.

- Take the kite out of the bag and unfold it on the ground with the trailing edge facing into the wind.
- Put sand or snow on the trailing edge or on one tip if launching at the edge of wind window.
- Take the bridle connector loops from the velcro keeper.
- Make sure there are no twists in the kites bridles.
- Un-wind the lines and remove any twists.
- If lines are un-connected, connect them using the "larks head" knot. Connect the lines on the kite following the line label system (1 to 1, 2 to 2, 3 to 3).

KITE SET-UP



WARNING:

All Ozone release systems require the user to operate them manually in the case of an emergency. It is imperative the kite is set-up as shown in the manual, incorrect setup will compromise the operation of the release system. All lines must be tangle free and the wrist leash connected in the right way, see pictures.

PRIMARY RELEASE

- This kite is equipped with a wrist leash release system.
- Always use the wrist leash. Attach it around your wrist before you start.
- To engage the wrist leash release line simply let go of the control bar.
- The kite will loose power and fall down to the ground.
- Practice using the wrist leash release system until you are 100% confident.

NOTE: In very light winds the velcro holding the releasing leader line and stopper ball may need to be manually opened before letting go of the control bar.

PRIMARY RELEASE 2-LINE



PRIMARY RELEASE 3-LINE



1



2



3



4

SECONDARY RELEASE

- If you need to completely free yourself from the kite undo the wrist leash velcro. - Be aware the kite will likely fly downwind out of reach. Do not use the secondary release if there are people or obstacles down wind.



1



2



3



4

1st FLY

LAUNCH AND FLYING

OPTION 1:

- Launch the kite at the side of the wind window with an assistant holding the leading edge.
- Take a few steps back to put tension into the lines and to fill the kite with air.
- Slowly steer the kite up.



1



2

OPTION 2:- LIGHT WINDS ONLY.

- Secure the kite with sand or snow along the trailing edge.
- Without putting tension on the lines walk to be upwind of the kite.
- Take a few paces back, the kite will start to fill with air.
- Slowly steer the kite up.



1



2



3



4

1st FLY

PRACTISE FLYING SKILLS

- Use smooth inputs to change direction with both arms outstretched.
- Altering the distance between the flying lines turns the kite.
- Pull the left side of the control bar towards you while pushing the right side away to turn the kite left. Do the opposite to turn the kite right. It is a similar movement/technique as if you were riding a bike.
- Practise control of the kite in all areas of the wind window.

LANDING

OPTION 1:

- Fly the kite to the edge of the wind window and have an assistant take hold of the leading edge of the kite.
- Make sure the assistant knows not to touch the flying lines or kite bridles, only the kite sail material should be held.
- Walk towards the kite when the assistant has a secured grip to de-power the kite.



1



2

OPTION 2:

- Engage the wrist leash release by letting go of the control bar.
- The kite will loose power and fall down to the ground.

RE-LAUNCH 2-LINE

- Pull a leader line to turn one side of the kite towards you at the same time as taking a few steps towards the kite.
- Keeping light tension on the lines, walk around to the side and downwind to be at 45 degrees to the kite and wind direction. Ideally the kite will be folded in half and one tip will sit on top of the other.
- Walk back upwind to the center of the wind window, the kite lines now face straight downwind again and the leading edge of the kite points upwards catching some air.
- Take a few steps backwards and pull on the bar, the kite will inflate with air.
- Steer the kite up off the ground.

NOTE: this 2-line re-launch technique works on a clean beach/grass park etc. In some cases it is easier to have an assistant re-launch the kite at the side of the wind window as shown in section 1ST FLY - OPTION 1



1



2



3



4



5



6



7



8



7



8

RE-LAUNCH 3-LINE

- Pull the wrist leash line to reverse the kite off the ground.
- As the kite reverses, keep holding the wrist leash line and turn the bar to one side.
- The kite will turn over ready to re-launch.
- Let go of the wrist leash line and take hold of the bar as the kite takes off.



1



2



3



4

SECURING THE KITE USING THE GROUND STAKE (ACCESSORY)

We recommend purchasing the Ground Stake accessory as it makes ground handling, securing the kite and packing much easier. Contact your local shop/dealer.

To secure the kite using the Ground Stake, engage the wrist leash release by letting go of the control bar. The kite will loose power and fall down to the ground. Ensure the Ground Stake is firmly in place, and hook the wrist leash around the Ground Stake handle. This will keep the kite on the ground.



1



2

PACKING

- Have an assistant land your kite and secure it.
- Once the kite is secured, wrap the lines in a figure 8 around the bar ends until you reach the kite.
- Use the elastic line retainers to keep the lines held in place.
- Attach the wrist leash around the bar end.
- Place the bridles inside the kite and use the velcro keeper to secure lines in place.
- Fold the kite tip on tip then roll to the centre.
- Roll the kite up with the bar inside to fit into the carry bag.

PACKING USING THE OPTIONAL GROUND STAKE ACCESSORY:

- Land the kite using the wrist leash release.
- Attach the wrist leash around the secured Ground Stake.
- Walk to the kite, take one end into the wind.
- Place the bridles inside the kite and use the velcro keeper to secure lines in place.
- Fold the kite tip on tip then roll to the centre.
- Walk back to the control bar with the kite.
- Secure the kite and wrap the lines in a figure 8 around the bar ends.
- Use the elastic line retainers to keep the lines held in place.
- Attach the wrist leash around the bar end.
- Roll the kite up with the bar inside to fit into the carry bag.




1



2



3

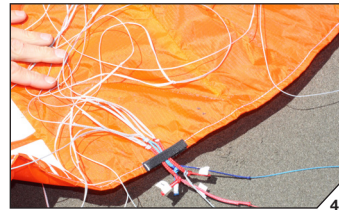

4



5



6



13



14



7



8



9



10



11



12

CARE & MAINTENANCE

YOU MUST INSPECT ALL YOUR EQUIPMENT BEFORE AND AFTER EVERY USE.

Control system: Check for abrasion/wear, if any part is damaged replace it immediately.

Lines: Check them every time you wind and unwind the lines. If one of them is damaged, replace the corresponding pair.

Bridle lines: Check the bridle lines for abrasion, if any are damaged replace them immediately.

Sail: Check there are no holes or tears in the sail. If the sail is torn, you can repair it with the sticky cloth, provided in repair kit. To repair the sail, make sure it is clean and dry. Prepare two pieces of sticky cloth, one for each side of the damaged area. The patch should cover the hole by at least 2cm all round. Lay flat and stick on both sides. Major repairs such as a tear across panels should be professionally repaired.

Packing: Dry your kite after use away from the sun and direct heat. Never leave a wet kite in its bag. Store your kite in a dry place out of the sun. Never wash or clean it with detergent

OZONE[®]