

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE


WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

ZEPHYR V6 RIGGING DIAGRAM

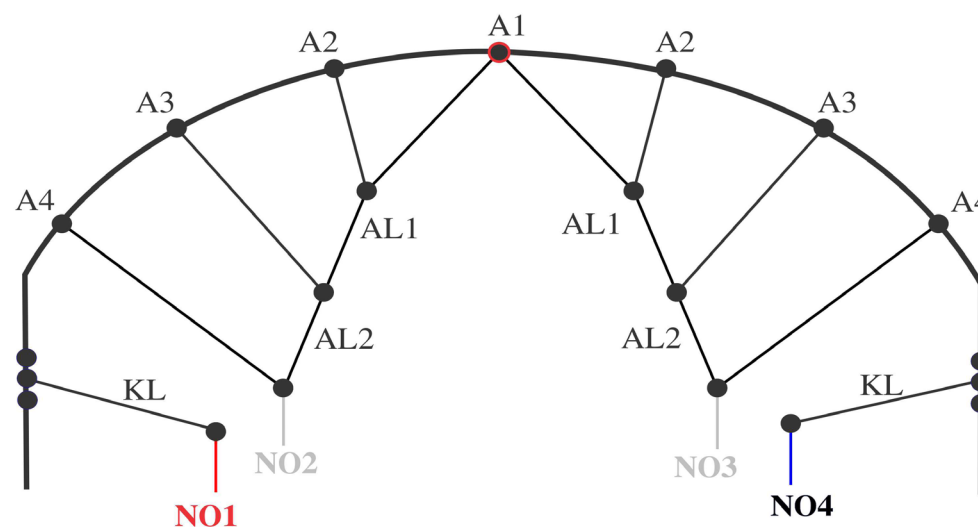

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

A1	1850
A2	1000
A3	1370
A4	2050
AL1	1280
AL2	1640
KL	1290
KL	1290