

CHECKING BRIDLES AND SPEED SYSTEM FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES AND SPEED SYSTEM TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS ON THE NEXT PAGE TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS



- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles as in the image.
- Print out the sheet and write down any differences.

If your bridles are out by more than 15mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

SPEED SYSTEM ZERO POSITION

You can check your Speed System lines by levelling the front and back line pigtails, then tension the two top ends of the Speed System where the bridle lines are attached, they should be at the same level + or - 15mm. See picture below.


If the difference between the two ends is bigger than 15mm you should replace your Speed System.

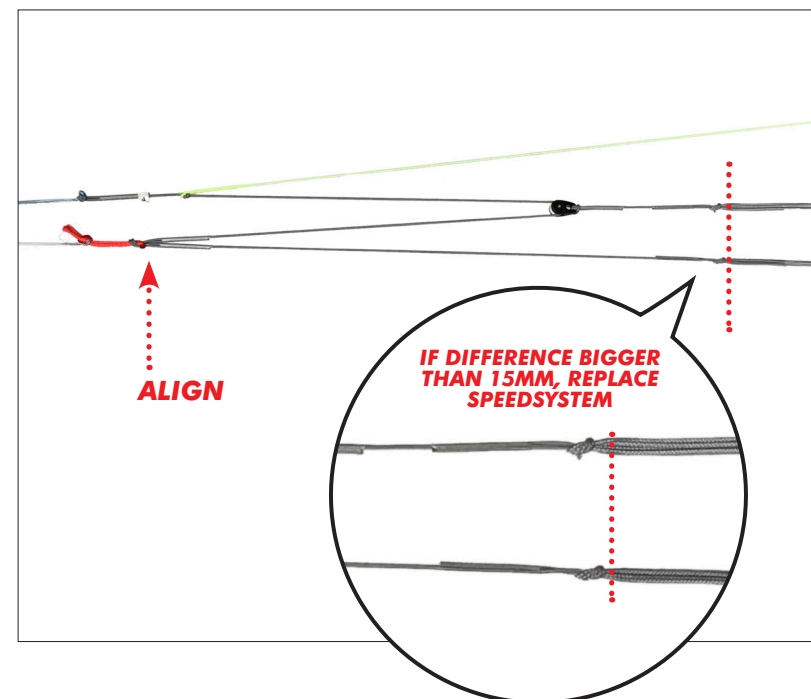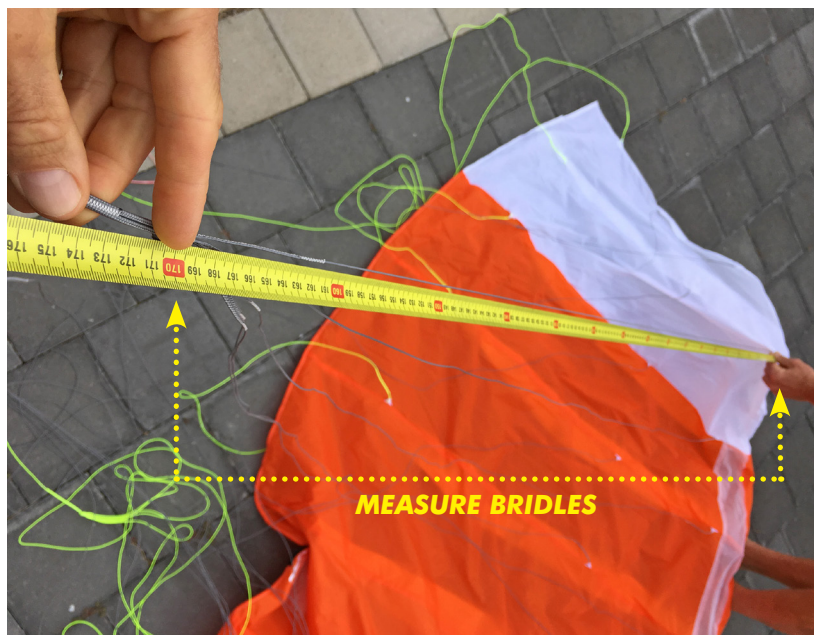


BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	4m	6m	8m	10m
AR1	2244	2881	3317	3692
AR2	2142	2754	3172	3544
AR3	2019	2599	2996	3362
AR4	1874	2415	2786	3148
AR5	1720	2221	2565	2914
AR6	-	-	-	2725
A6	595	781	910	-
A7	-	-	-	649
BR1	2232	2865	3299	3671
BR2	2135	2744	3162	3531
BR3	2007	2587	2984	3348
BR4	1869	2415	2789	3149
BR5	1737	2246	2596	2942
BR6	1015	1300	1495	2787
BR7	-	-	-	2008
B6	651	853	993	-
B7	-	-	-	721
K1	1654	2129	2454	2745
K2	1516	1954	2254	2537
K3	1368	1766	2040	2318
K4	1215	1573	1819	2095
K5	1072	1392	1612	1908
K6	-	-	-	1754
KR1	1220	1370	1495	1660


PURE V1 4M, 6M, 8M RIGGING DIAGRAM

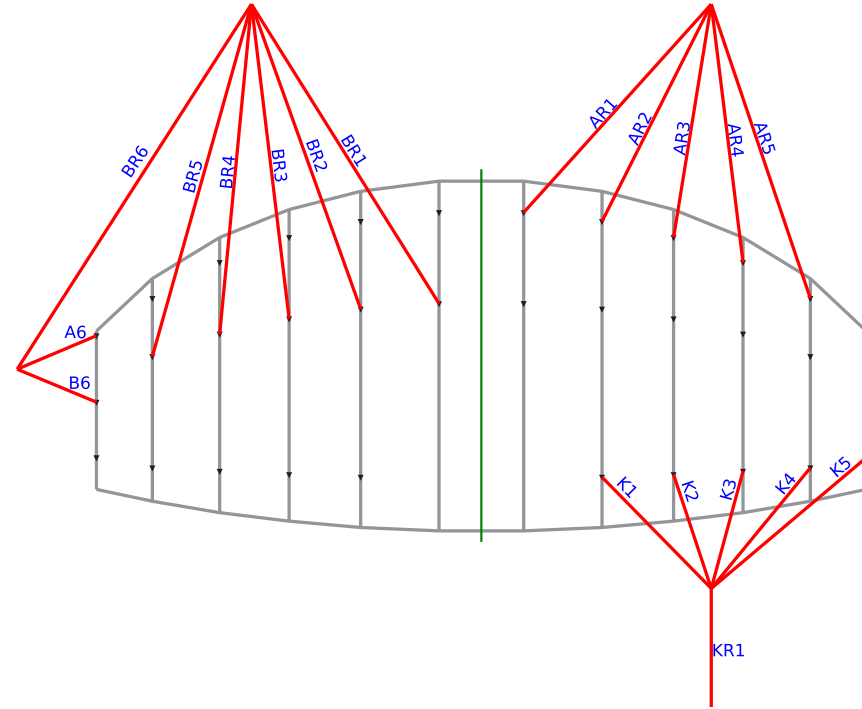

PURE V1 10M RIGGING DIAGRAM

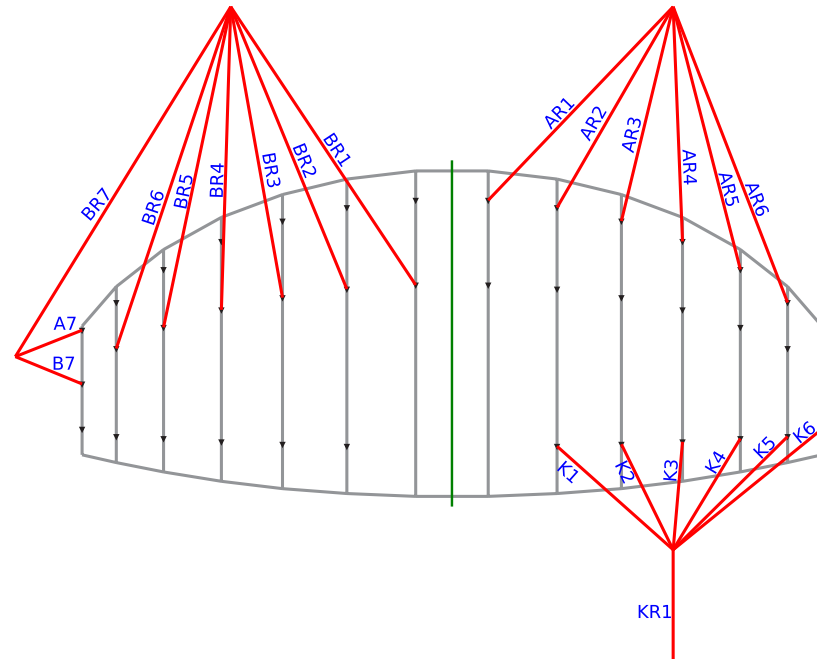

SPEED SYSTEM

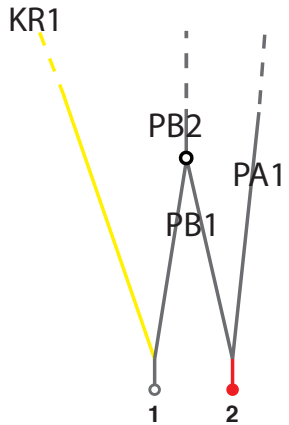

DIMENSIONS:	
PA1	650
PB1	1000
PB2	200