

BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.

1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note or label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

BRIDLE LINE LENGTHS. ALL MEASUREMENTS IN MM

LINE NO.	1.5M	2M	2.5M	3M
AR3	250	300	345	385
AR2	365	440	505	570
AR1	440	530	610	685
A6	382	470	544	620
A4	412	504	584	660
B6	438	538	622	707
A5	452	554	640	728
B5	463	567	655	745
A2	470	574	663	751
A3	480	586	678	766
B3	487	595	689	777
A1	531	648	748	846
B1	543	662	763	864
ISL	730	900	1035	1155
LSL	815	1000	1150	1285

IGNITION V3 RIGGING DIAGRAM

