


BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.

1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note or label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

AMP V2 RIGGING DIAGRAM

YELLOW = 4-LINE BRIDLE MODE

GREEN = 5-LINE MODE

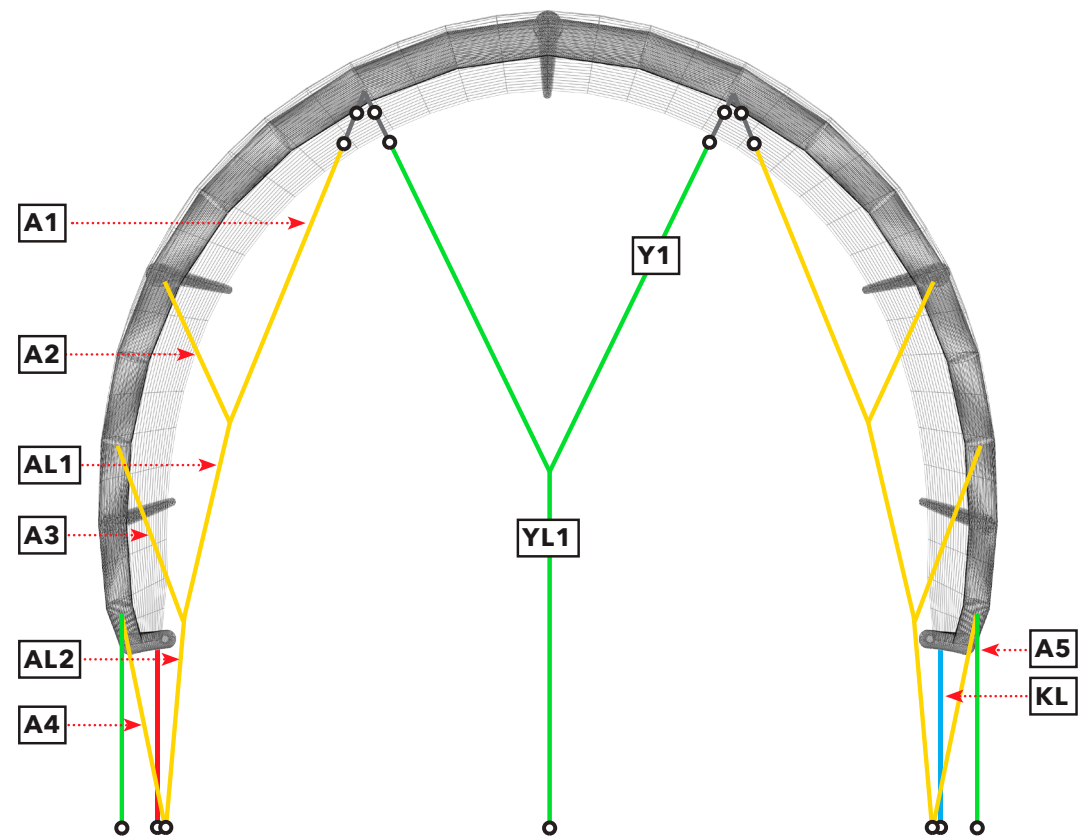

BRIDLE LINE LENGTHS. ALL MEASUREMENTS IN MM

LINE NO.	7M	9M	11M	13M	15M
A1	930	1070	1240	1355	1505
A2	480	540	595	640	705
A3	630	705	780	845	925
A4	775	875	960	1035	1135
AL1	665	750	830	895	980
AL2	710	800	880	950	1040
KL	510	570	630	700	750
A5	920	1035	1170	1200	1290
Y1	1300	1560	1620	1750	1910
YL1	960	1020	1360	1455	1590