

## CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.


### RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

| BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM |      |      |      |      |      |      |      |      |      |      |      |
|--|------|------|------|------|------|------|------|------|------|------|------|
|  | 5m   | 6m   | 7m   | 8m   | 9m   | 10m  | 11m  | 13m  | 15m  | 17m  | 19m  |
| A1   | 760  | 835  | 900  | 950  | 1005 | 1060 | 1115 | 1215 | 1300 | 1380 | 1450 |
| A2   | 365  | 400  | 430  | 455  | 485  | 510  | 540  | 585  | 625  | 665  | 700  |
| A3   | 560  | 610  | 660  | 715  | 760  | 800  | 840  | 915  | 980  | 1045 | 1100 |
| A4   | 465  | 490  | 530  | 560  | 600  | 630  | 665  | 720  | 770  | 820  | 865  |
| A5   | 360  | 390  | 400  | 410  | 460  | 480  | 500  | 540  | 550  | 610  | 660  |
| AL1  | 600  | 660  | 710  | 760  | 805  | 850  | 895  | 975  | 1040 | 1110 | 1165 |
| AL2  | 1000 | 1090 | 1180 | 1235 | 1310 | 1380 | 1450 | 1580 | 1690 | 1800 | 1895 |
| AL3  | 710  | 775  | 835  | 860  | 910  | 960  | 1010 | 1100 | 1170 | 1250 | 1315 |
| KL   | 580  | 620  | 670  | 710  | 750  | 790  | 830  | 910  | 970  | 1030 | 1090 |

EDGE V9 5/6M RIGGING DIAGRAM

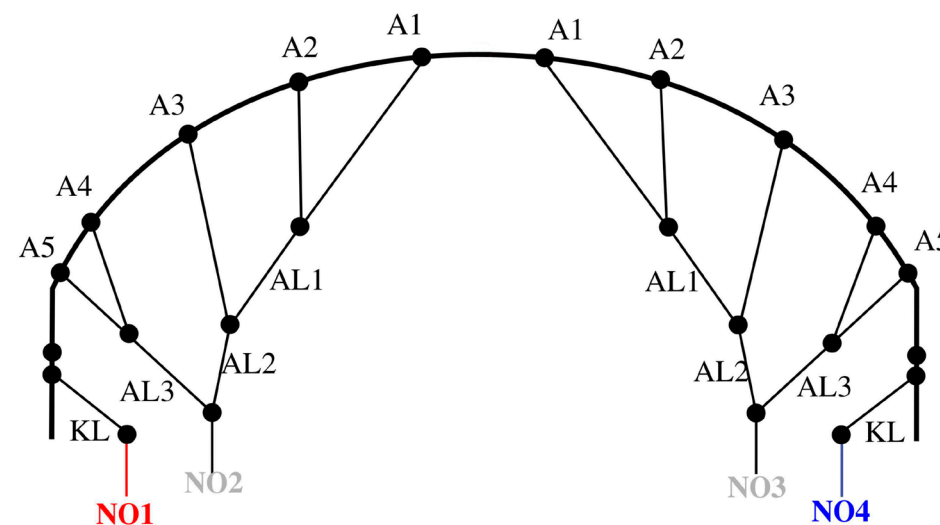

EDGE V9 7/8/9/10/11/13/15/19M RIGGING DIAGRAM

