



THANKS

Thank you for purchasing this Ozone kite. Our mission is to build kites with cutting edge performance, that are easy, fun and safe to use, no matter what your level.

At Ozone we are passionate about kiting, and it is this passion that drives our design team to perfect and develop new kites that we love to ride with.

We are proud of the quality of our products, and constantly searching for the best components and materials to use in our designs. All of our kites and accessories are manufactured in our own high-quality production facility in Vietnam, which guarantees a build quality that we are proud to put the Ozone name on. A close look at one of our kites reveals that same superior quality and construction that ensures that every Ozone kite will enjoy a long life, with consistent handling, performance and aesthetics.



POUR TÉLÉCHARGER CE MANUEL DANS VOTRE LANGUE, ALLEZ SUR LE PAGE DU PRODUIT ET CHOISISSEZ VOTRE KITE >> WWW.FLYOZONE.COM



PARA DESCARGAR ESTE MANUAL EN SU IDIOMA DIRÍJASE A LA PÁGINA DEL PRODUCTO DEL MODELO DE SU COMETA >> WWW.FLYOZONE.COM



UM DIESE ANLEITUNG IN DEINER SPRACHE HERUNTER ZU LADEN, GEHE AUF DIE PRODUKTSEITE DES KITES, WELCHEN DU BESITZT >> WWW.FLYOZONE.COM



PER SCARICARE QUESTO MANUALE NELLA VOSTRA LINGUA, ANDATE ALLA PAGINA PRODOTTI DEL KITE IN VOSTRO POSSESSO >> WWW.FLYOZONE.COM

WARRANTY

Ozone warrants this product to be free from major defects in material or workmanship to the original purchaser, for a period of six months from the date of purchase. This warranty is subject to the following limitations;

- The warranty is valid only when the product is used for its intended use, and does not cover products used in rental or teaching operations.
- Ozone will make the final warranty determination, which may require inspection and/or photos of the equipment, which clearly show the defect(s). If necessary, this information must be sent to the Ozone dealer, postage prepaid.
- If a product is deemed to be defective by Ozone, the warranty covers the repair or replacement of the defective product only.
- Ozone will not be responsible for any costs, losses, or damages incurred as a result of loss of use
 of this product. The warranty does not cover damage caused by misuse, abuse, neglect or normal
 wear and tear including but not limited to; rigging with other than Ozone components, damage due
 to excessive sun exposure, damage caused by improper handling or storage, damage caused by
 use in waves or shore break and damage caused by anything other than defects in material and
 workmanship.
- This warranty is voided if any unauthorized repair, change or modification has been made to any part
 of the equipment. The warranty for any repaired or replaced equipment is good from the date of the
 original purchase only. The original purchase receipt must accompany all warranty claims.
- The name of the retailer and date of purchase must be clear and legible.
- There are no warranties that extend beyond the warranty specified herein.

WARRANTY CLAIMS

- Warranty claims can only be handled once the product has been activated through our website. (go to www.flvozone.com to register your kite)
- Warranty claims must be processed and be issued a return authorization prior to shipping to the Ozone dealer the product was purchased from.

RELEASE OF LIABILITY

OZONE KITES LTD RELEASE OF LIABILITY, CLAIM WAVIER, ASSUMPTION OF RISK

By assembling and/or using this Ozone product, you agree that you have read and understood the entire Ozone product owners manual, including all instructions and warnings contained in that manual, prior to using the Ozone product in any way. You additionally agree that you will ensure any additional or subsequent user of your Ozone product will read and understand the entire Ozone product owners manual, including all instructions and warnings contained in that Manual, prior to allowing that person to use your Ozone product.

ASSUMPTION OF RISK

Use of the Ozone product and any of its components involve certain risks, dangers, and hazards which can result in serious personal injury and death to both the user and to non-user third parties. In using this Ozone product, you freely agree to assume and accept any and all known and unknown risks of injury to you and third parties while using this equipment. The risks inherent in this sport can be greatly reduced by abiding by the warning guidelines listed in this owner manual and by using common sense.

RELEASE AND WAIVER OF CLAIMS

In consideration of the sale of the Ozone product to you, you herby agree to the fullest extent permitted by law, as follows;

TO WAIVE ANY AND ALL CLAIMS that you have or may in the future have against Ozone Kites LTD and all related parties resulting from use of the Ozone product and any of its components.

TO RELEASE Ozone Kites LTD and all related parties from any and all liability for any loss, damage, injury or expense that you or any users of your Ozone product may suffer, or that your next of kin may suffer, as a result of the use of the Ozone product, due to any cause whatsoever, including negligence or breach of contract on the part of Ozone Kites LTD and all related parties in the design or manufacture of the Ozone product and any of its components.

In the event of your death or incapacity, all provisions contained herein shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives. Ozone Kites LTD related parties have not made and expressly deny any oral or written representations other than what is set forth herein the Ozone Product Users Manual.

WARNINGS PROPRIEST OF THE PROPRIEST OF T

READ THE FOLLOWING POINTS BEFORE ASSEMBLING YOUR KITE: WARNING:

- Kite flving can be dangerous.
- Always use extreme caution when using this product.
- Misuse of this product can cause serious injury or death.
- Only use this product if you are in good physical health.
- Never act in a careless manner when using this product (such as jumping in the air, or tying yourself down).
- You are responsible for your own safety, and the safety of others around you when using this product.
- If you are under 18 you should have your parents or legal guardian read these warnings and instructions. You should not use this product unless you are under proper guidance and supervision.
- The use of this product exposes the user to many unavoidable and unexpected risks, dangers and hazards.
- Do not use this product if you are under the influence of alcohol, drugs or medications.
- This manual refers to the current product it comes with. No information contained herein applies to previous and/or other products. Always read and understand all warnings and instructions for any other product being used. To view previous product manuals go to www.flvozone.com

IMPORTANT SAFETY RULES:

- Before using this product you must take lessons from a certified instructor/school. Do not attempt to fly a kite without being taught by a certified kite instructor.
- This product is not a personal flotation device. Always wear a Coast Guard approved personal flotation device when using this product near the water.
- Always carefully inspect all of your equipment before using it.
- · Always have a partner when launching and landing your kite.
- Always learn using a small two line trainer kite before using a larger more complicated kite.
- Never allow anyone who is not familiar with traction kiting to use this product without experienced assistance.
- Never use this product without a safety leash system. A loose kite is extremely dangerous to everyone
- The kite/control system is equipped with passive safety systems, which need to be activated by the user for them to work.
- The leash system is not a permanent attachment to this product. Never permanently attach yourself to the kite or any of its components.

- Never use this the kite with another control system or safety leash. Only use the handles or bar that is supplied with this kite as other brands bars are not compatible with this design, therefore the safety system will NOT work.
- Always wear a helmet, knee/elbow pads, gloves, shoes and protective eyewear when using this
 product.
- Always use a high quality and well maintained kite specific harness.
- Get yourself used to the way your quick release devices work by testing them often in a non
 emergency situation.
- Rinse your quick release device in fresh water after every session. Quick release devices have a limited lifetime and must be checked and replaced often.
- Always release and re-load all the safety systems to familiarize yourself with how they work. This is the
 only way to be sure that you know how to use them in all situations, and that they are correctly loaded
 and safe for use.
- If you have a bar with a mechanical quick release trim loop it must be changed after 250hours of kiting. Change any quick release or safety leash before if you see any sign of wear. The wearing of your quick release devices is not considered a warranty issue.
- Never act in a careless manner when using this product (such as jumping in the air, using this kite to fly or tying yourself down to a fixed object whilst attached to the kite).

CHOOSE SAFE WEATHER CONDITIONS:

- Never learn to use this product in more than 10 knots of wind.
- We highly recommend you purchase a wind speed indicator to be able to measure wind speeds.
 Study the wind guide to understand wind speeds.
- Never use this product in high winds.

- Never use this product in thunderstorm and lightning conditions.
- Only use this product when you can remain in a standing position.
- Never use this product in wind conditions that are above your ability level.
- Never use this product near or on the water in offshore wind conditions.




CHOOSE A SAFE LOCATION:


- Always observe local rules and regulations when using this product.
- Never use this product near power lines, telephone poles, trees, bushes, roads, automobiles or airports.
- Only use this product when you have at least 100m of clear space downwind, and on both sides of your launching position. The power of the kite can pull you downwind unexpectedly with great force.
- Do not fly your kite over other people or pets. Spectators should remain upwind of you when using this product.
- Never use this product on crowded beaches or fields.
- Never use this product near the water unless you know how to swim and are in good physical health.
- Practice launching and landing procedures, and self rescue techniques before using this product near the water.

USE CAUTION WITH FLYING LINES:

- Never touch the flying lines when the kite is in use. Flying lines are extremely dangerous while under tension and can cause serious injury or death.
- Never use this product with worn lines. A line that breaks while under tension can cause serious injury or death.
- Always check your flying lines for knots before each use. Knots greatly reduce the strength of the lines.
- Stay away from tangled flying lines unless the kite is secured to the ground. An unsecured kite can self launch unexpectedly, and can cause serious injury or death.
- Never allow yourself, or anyone else, to get between the handles/control bar and the kite when using this product.

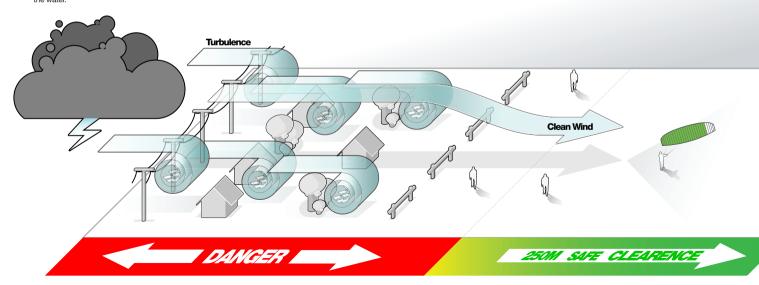


SET-UP

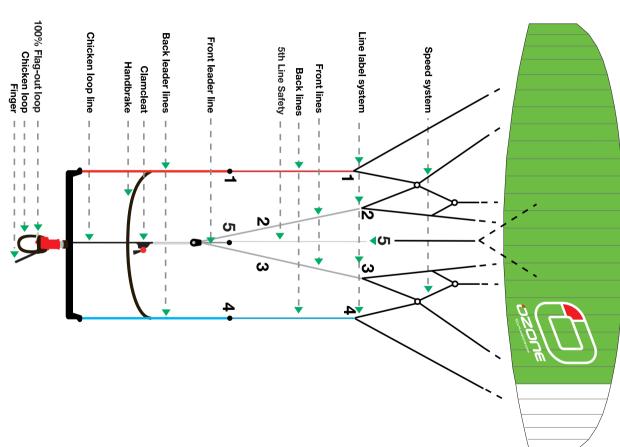




FORCE	KNOTS	MPH	METRES/SEC	KPH	DESCRIPTION	SKILL LEVEL	ON LAND
0	<1	<1	<0-0.2	<1	Calm	N/A	Calm, smoke rises vertically. Go paragliding/base jumping/hang-gliding
1	1-3	1-3	0.3-1.5	1-5	Light Air	N/A	Smoke drift shows wind direction. Its coming-get large size kites ready!
2	4-6	4-7	1.6-3.3	6-11	Light Breeze	Beginner	Wind felt on face, leaves rustle. Cruising on Mt board/buggy/snowkite
3	7-10	8-12	3.4-5.4	12-19	Gentle Wind	Beginner	Leaves in motion, light flags extended. Ripping on Mt board/buggy/snow
4	11-16	13-18	5.5-7.9	20-29	Moderate Wind	Intermediate	Flags flap, small branches move. Now we're talking>>jumping begins
5	17-21	19-24	8.0-10.7	30-38	Fresh Wind	Advanced	Small trees begin to sway. Loving life, fully powered, smiling
6	22-27	25-31	10.8-13.8	39-50	Strong Wind	Advanced	Large branches in motion. Experts only with huge grins
7	28-33	32-38	13.9-17.1	51-61	Near Gale	Advanced	Whole trees in motion . Hard core riders flying!
8	34-40	39-46	17.2-20.7	62-74	Gale	N/A	Trouble walking! Carnage for riders, better to chill out in comfort watching Ozone DVD

⊼ In a light breeze, you may launch your kite downwind

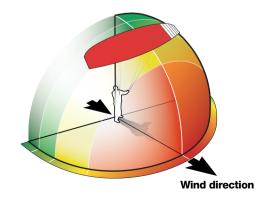

₹ In gentle to strong wind, launch your kite at the edge of the wind window

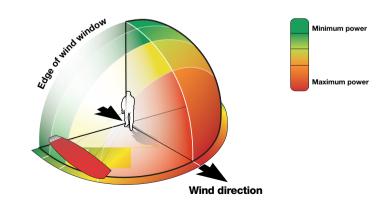

SECURITY SEARCH SEARCH



IMPORTANT: All Ozone safety systems require the user to operate them manually in the case of an emergency. It is imperative the kite is set-up as shown in the manual, incorrect setup will compromise the operation of the safety system. All lines and de-power systems must be tangle free and the safety leash connected in the right way see nictures.

7 : OZONE DEPOWER FOIL SAFETY SYSTEMS

⊼ CHICKEN LOOP CONNECTION

The chicken loop is the primary connection to the kite. Make sure you connect to the chickenloop using the finger as shown in the pictures.







■ BELOW THE BAR SAFETY (RECOMMENDED SAFETY OPTION)

Attach the safety leash to the total flag out system. This is the small eyelet on the steel ring at the bottom of the Megatron, see pictures. In an emergency situation, when the chicken loop is released, the kite will flag out completely with no power.





ADVANCED RIDERS (use at your own risk, not recommended)

Riders doing unhooked tricks or who are more confident and have spent many hours kiting can attach to the ring using the suicide system, where the chicken loop runs through the large eye of the steel ring, see pictures.

NOTE: If you let go of the bar (without releasing the Megatron, e.g. missed handle pass) the kite will de-power but WILL NOT flag out. Also be aware that in this situation, the Megatron will be out of reach and can therefore not be released. If you are hooked in and release the Megatron the steel ring automatically comes off the chicken loop and the kite will flag out.





7 1st STAGE OF SAFETY

Release the chickenloop as shown in the pictures. Providing your leash is attached to the flag out system the kite will 100% depower.





In the case of an extreme emergency where you need to completely release from the kite, use the quick release on the safety leash. This will completely detach the kite and control system from the user, and could therefore hit anything or anyone downwind causing damage, serious injury or death. RIDE RESPONSIBLY.

FINAL STAGE OF SAFETY (in an extreme emergency)







OF REAST

⊼ RELOADING THE LEASH



₹ RELOADING THE MEGATRON CHICKENLOOP















SETLUP SANDERS



IMPORTANT: Set up your kite for the first time in wind less than 12kph to ensure your safety and the safety of others.

- Unfold the kite on the ground, in the direction of the wind.
- Fold over the upwind wing tip and put some snow, sand, or your board on the tip to secure the kite.
- Take the speed system from the Velcro retainer and lay out on the ground. Untangle if necessary.
 Take the bar and unwind the lines at 90 deg to the kite. (Bars are delivered with the flying lines already connected.)
- Connect the lines to the kite following the numbered label system ensuring all lines are free from each other.

Now you're ready to fly!

⊼ KITE SET-UP









BAR SET-UP








⊼ LARKS HEAD KNOT

All line attachments are done using the Larks Head Knot.









1st FLV

 \overline{A}

WARNING: Never fly your kite in strong wind for the 1st time. Do not attempt to fly a kite without being taught by a certified kite instructor.

オ LIGHT WINDS

If the wind is light (less than 12 kph) lay trailing edge directly into the wind with sand/snow to secure kite. Place yourself directly in front of the kite. Hook into the chicken loop.

Step backwards while pushing the bar forward. The kite will inflate and take off. In light winds, to assist launching, gently grab and pull on the front lines.







₹ STRONG WINDS

If the wind is strong (more than 12 kph), lay kite directly downwind with sand/snow or board securing the upwind tip.

Place yourself at 45 deg to the kite upwind. Hook into the chicken loop. Step backwards while pulling the down wind side of the bar to ease kite into the air. The kite will inflate and take off on the side of the wind window.







7 LANDING

OPTION 1:

Release the Primary Security.

 Ensure the safety leash is connected to the total flag out line (see pictures, this is the recommended safety option). Release the Megatron chicken loop, and the kite will flag out completely and fall to the ground, (see SECURITY)

OPTION 2:

Pull the 5th line quickly through the chickenloop for about 2m. The kite will loose its power and stall to the ground. The more you pull, the less power. To secure the kite on the ground, hook the loop you find in the 5th line about 2m up, into your spreader hook, ground stake or bar horn.









4st FLV

7 LANDING

OPTION 3:

Grab the Hand Brake with one hand then pull it behind your back and HOLD.

- The kite will stall evenly and reverse to the ground.
- Take care not to release the Hand Brake until the kite has been secured with sand or snow.





OPTION 4:

Fly the kite to the edge of the window and lower it gently and controlled.

- . Have a friend catch and take control of the kite.
- Run towards the kite to take all tension from the lines.





⊼ REVERSE RELAUNCH

When the kite is landed face down, take the handbrake firmly, pull and hold. The kite will reverse from the ground, turn over, and land leading edge up. The kite is now ready to launch normally. See "J.A.IV.CHING".





▼ CLAMCLEAT TRIMMER


You can adjust the kites power further by using the trimmer and locking clamcleat. Pull trimmer towards you to reduce power, release trimmer away from you to increase power.







オ: EXTRA TRIM ADJUSTMENT





CARE & MAINTENANCE

Dry your kite after use away from the sun and direct heat. Never Leave a wet kite in its bag. Store your kite in a dry place out of the sun. Never wash or clean it with detergent. Always ensure your kite is stored completly dry.

It is imperative that you inspect all you equipment before and after every use. Immediately replace any worn or damaged parts with original parts only. A major failure could lead to serious injury or death.

PRE AND POST USE CHECK LIST.

- Chicken Loop Line: Check for abrasion, if it's damaged change it immediately.
- Lines: check them every time you wind and unwind the line. If one of them is damaged, change the
 corresponding pair.
- Speed System: check the pulleys and lines for abrasion, if it's damaged change them immediately.
 Speed system lines MUST be changed after every 100 hours flying time.
- Bridle Lines: check no lines are damaged. If so, contact your dealer and change them.
- Sail: check there are no holes or tears in the sail. If your sail is torn, you can repair it with the sticky cloth, provided in repair kit.

To repair the sail, make sure it is dry. Prepare two pieces of sticky cloth, one for each side of the damaged area. The patch should cover the hole by at least 2cm all round. Lay flat and stick on both sides.

PACKING CONTROLL OF THE PACKING THE PACKIN

- Land and safely secure your kite with sand, snow or your board.
- Wind the lines in figure 8 around the bar horns. Secure the lines with the elastic.
- Put the bar next to the trailing edge, and secure lines with velcro retainer.
- Fold your kite from the tips to the centre.
- Roll the sail from the trailing edge to the leading edge with the bar inside.
- Fasten the webbing tie around the folded kite.














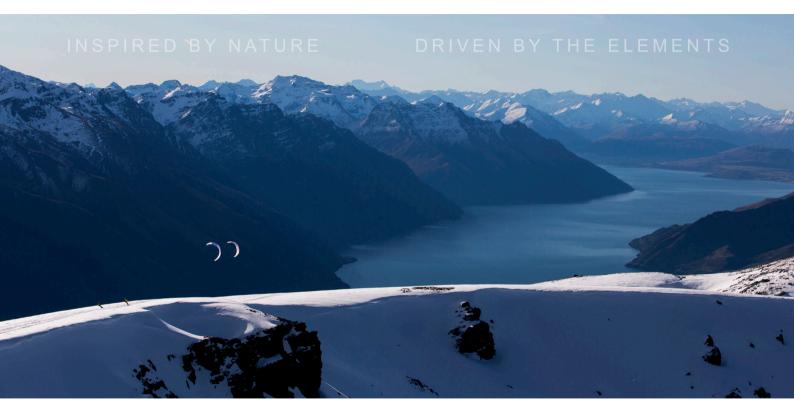

RIDERS: MATT TAGGART GAVIN MULVAY PHOTO: GRAEMEMURRAY.COM • MT HECTOR • QUEENSTOWN • NZ

